

SubaXtreme

Manufacturers of Subaru Accessories

Nudge bar Fitting Instructions Outback/Liberty -10 on


NBSP-046

NBSP-047

- 1/ Open Bonnet.
- 2/ Remove the original plastic bumper cover with grill.
- 3/ Remove plastic air dam. (remove front sump guard bolts)
- 4/ Dislodge steel reinforcement bar enough to fit nudge bar brackets **in front of this bar**. Refit both reinforcing bar and brackets using the supplied longer bolts and tighten.
- 5/ Optional: For a better fit, trim plastic sections around nudge bar steel mounts as indicted in photo.
- 6/ Replace air dam and sump guard bolts.
- 7/ Carefully refit the original plastic bumper cover, it is best to place masking tape on bumper cover where the steel brackets protrude through, to avoid scratching the bumper cover.
- 8/ Loosely bolt alloy bar (mounting lugs outboard of the steel brackets) to the vehicle using supplied 4 x M12 bolts, lock nuts & washers.
- 9/ Align as required and tighten bolts.

Components

- 1 - Aluminium Bar
- 2 - Steel mounting brackets
- 1 - Fitting instruction
- 4 - M12 x 35 Bolts
- 4 - M12 Nyloc Nuts
- 4 - M12 Washers
- 6 - M8 x 30 Bolts
- 6 - M8 Washers

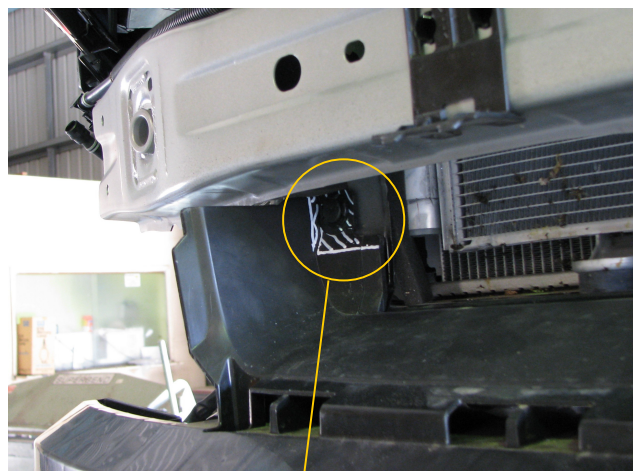

Optional: Trim both sides of air dam for better fit.