

Nudge Bar

for
Subaru Outback MY15 on

Bullbar Component List

- Fitting instructions
- Aluminium nudge bar
- 2 x steel mounting brackets - left & right
- 4 x M12x35mm bolts
- 8 x M12 washers
- 4 x M12 nyloc nuts
- 6 x M8x35mm bolts
- 6 x M8 small washers

Tools Required


- Car ramps, chassis stands or hoist
- Clip removal tool or flat blade screwdriver
- 10mm, 12mm, 13mm, 19mm sockets + ratchet drive
- 18mm spanner
- Hacksaw or jig-saw to trim bumper

Fitting Instructions

1. Elevate front of vehicle safely – ramps, stands or hoist.
2. Open bonnet and remove 6 clips from top of bumper between the headlights.
3. Remove 2 plastic clips from wheel arches.
4. Remove 9 plastic clips from the underside of the bumper attaching splash guards and lower air dam.
5. Reach in through the underside splash guards and unplug the fog lights.
6. Gently 'peel' the bumper away, starting at the wheel arch pulling away from the car and unclipping the bumper from under the headlights.
7. Remove 5 bolts securing the plastic frame from the underside of the factory fitted reinforcing bar. Unclip the temperature sensor from the frame and remove the frame.
8. Unbolt the 8 bolts (4 each side) that secure the factory reinforcing bar to the front of the car.
9. Fit nudge bar mounting brackets into position, over the top of the reinforcing bar baseplates.
10. Insert 3 M8x35 bolts + washers into nudge bar brackets and tighten loosely. Use original reinforcing bar bolt in the fourth hole. Repeat on other side. Tighten all 8 bolts.

Fitting Instructions continued...

11. Cut out 2 horizontal bars from lower grill on the bumper on the very outer sections. See photo
12. Re-fit the plastic frame underneath the factory reinforcing bar.
13. Re-fit the temperature sensor to the frame.
14. Slip the plastic front bumper over the nudge bar brackets and carefully clip back into position.
15. Re-fit the original plastic clips to their original positions. 6 between the headlights, 2 in wheel arches and 9 in the under-side.
16. Fit aluminium nudge bar to the steel mounting brackets using the 4 M12x35 bolts, 8 M12 washers and 4 M12 nyloc nuts.
17. Gently tighten 4 bolts so that nudge bar holds position but can still be moved.
18. Manouver nudge bar into correct position/alignment, ensuring it sits level with the car.
19. Tighten all 4 M12 bolts.
20. Stand back. Admire handiwork and your NEW SubaXtreme nudge bar!

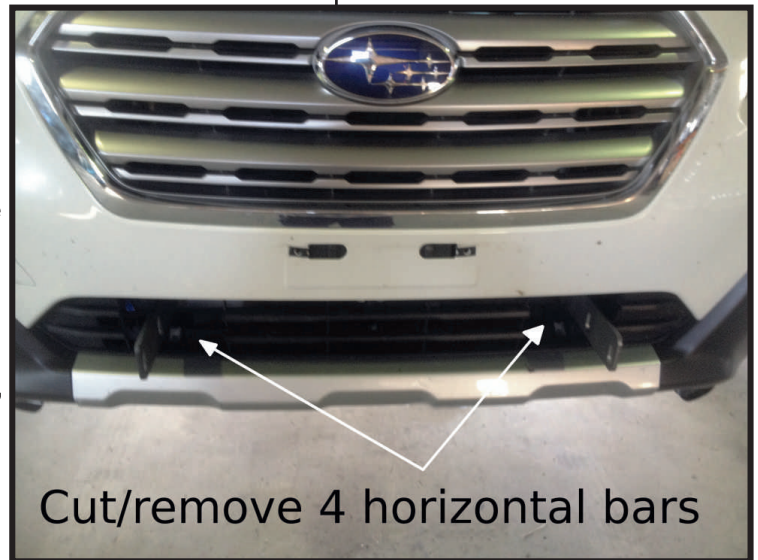

You can view the fitting video on our YouTube channel at the following address:-

<https://www.youtube.com/watch?v=bxA1mTCU9Cc>

