


1. Open bonnet.
2. Remove the original plastic bumper and grill.
3. On the right hand side of the reinforcement bar, remove the 4 original bolts then slide the right hand mounting bracket over the reinforcement. Using 4 of the M8 bolts and washers supplied, tighten down the brackets.
4. Repeat for left hand side.
5. Carefully refit the original plastic bumper, sliding over the protruding brackets.
Note: the brackets are a tight fit!
6. Fit nudge bar to vehicle, loosely bolt in place using supplied 4 x M12 bolts, nyloc nuts & 8 washers.
7. Align as required and tighten bolts.

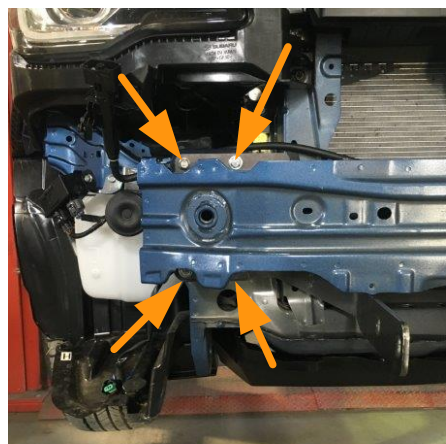

Tight fit!

Components

- 1 - Aluminium Nudge Bar
- 2 - Steel mounting brackets
- 1 - Fitting instruction
- 4 - M12 bolts
- 4 - M12 nyloc nuts
- 8 - M12 washers
- 8 - M8 bolts
- 8 - M8 washers