





Manufacturers of Subaru Accessories

Nudge Bar Fitting Instructions Tribeca 06-

- 1/ Remove original plastic bumper cover.
- 2/ Remove 3 outer M8 bolts from reinforcement bar and discard.
- 3/ Enlarge 4 holes indicated in photo to 8mm. and fit M8 x 75mm bolts through both holes with threads facing outboard.

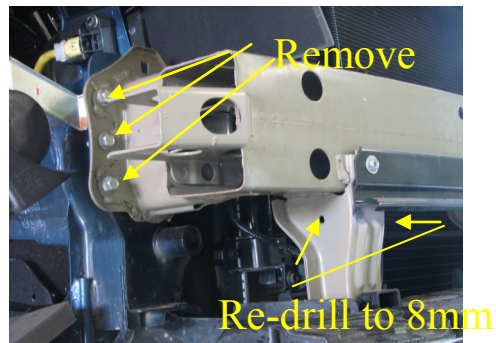

- 4/ Place the lug on the powdercoated mounting brackets over the bolts first and fasten to car with 3 M8 x 30mm bolts supplied.
- 5/ Tighten lug nuts first then remainder.
- 6/ Replace plastic bumper cover taking care not to scratch any painted parts.
- 7/ Attach pipework to protruding brackets with 4 x M12 bolts, check for fit and tighten.

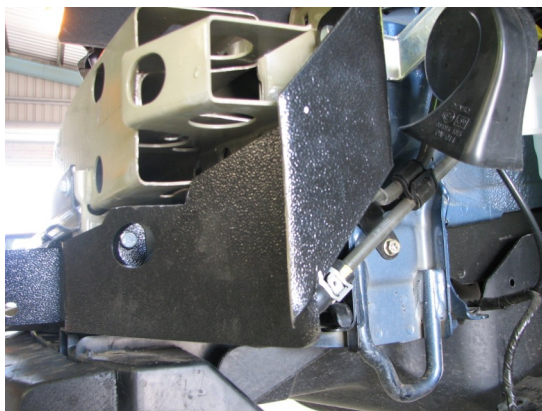

LHS with bracket fitted

Components.

- 1 Aluminium bar
- 2 Mounting brackets
- 1 Fitting instructions
- 4 M12 bolts
- 2 M12 nyloc nuts
- 4 M12 washers
- 2 M8 x 75mm bolts
- 6 M8 x 30 bolts
- 8 M8 washers
- 2 M8 nuts
- 4 M6 x 25mm bolts
- 4 M6 washers
- 4 M6 nuts