




**SG-0421**  
**Sump guard fitting instructions**  
**OUTBACK 2021 (BT)**

**Components:**

1 x Aluminium sump guard	2 x M8x35mm Bolts (for front of sumpguard)
2 x 5mm Aluminium spacers	2 x M10x50mm Bolts (for rear of sump guard)
2 x 26mm Aluminium spacers - 11mm hole	2 x M8x40mm Washers, 2 x M10X40 washers
1 x Fitting instructions	

1. Remove original plastic splash guard, and discard.
2. Place sump guard in position and using 2 x M8x35mm bolts/with washers and 5mm spacers at front of the guard, LOOSELY fit the guard
3. position of the 2 x 26mm Aluminium spacers on the rear engine cradle the holes required are identified below.

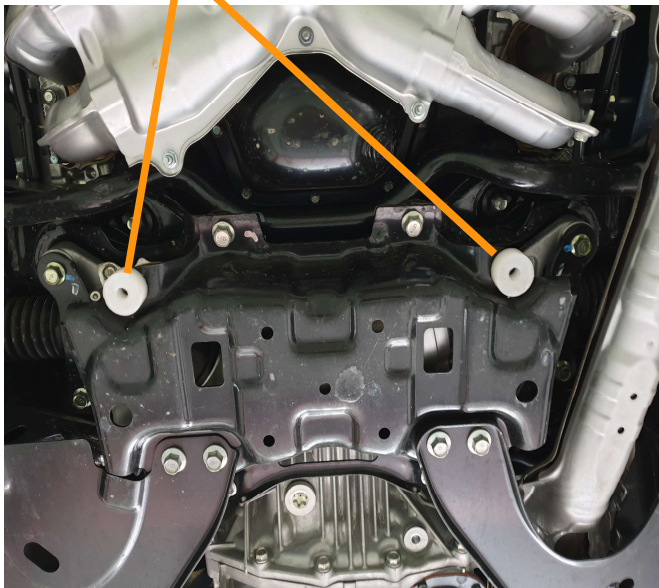

4. Hold the 2 x 26mm aluminium spacers provided between the hanging sump guard and the rear engine cradle aligning the spacers with the M8 holes in rear engine cradle as seen in picture above.
5. Using 2 supplied M8 x 50mm bolts and washers, fit bolts to the slots of sump guard going through the aluminium spacers and into the rear engine cradle.
8. adjust guard for best fit, checking for clearance with exhaust pipe and bracket near bolts. Tighten all bolts.