



Fitting Instructions
Sump guard
2019-ON Forester
SG - 059

Components

- 1. 2mm Thick front shield
- 1- Aluminum Sumpguard
- 2- M8x45mm Bolts
- 2- M8x50mm Bolts
- 4- M8x40mm Washers
- 1- Fitting Instructions
- 2- 26mm aluminium spacers


- 1. Remove original plastic sumpguard
- 2. Fit front shield using factory engine shield clips to hold in place as pictured below



Use clips from engine shield to hold shield in place

Use clip from engine shield to hold sheild in place

3. Place sumpguard into position. Using supplied M8 x 45mm bolts and washers loosely bolt front of sumpguard to previously used holes.
4. Using 2 supplied aluminium spacers bring sumpguard into position (as pictured below) then using supplied M8 x 50mm bolts and washers loosely bolt rear of sumpguard to old mount holes.
5. Position sumpguard for best fit, checking for clearance with exhaust pipe and bracket near front bolts. Tighten all bolts.

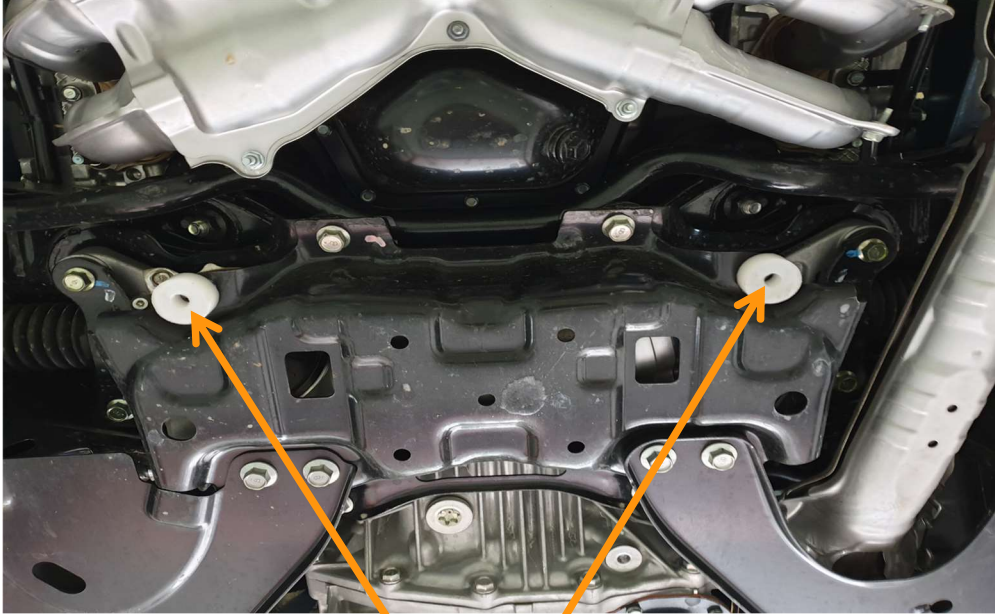

Place supplied spacers to rear of sumpguard to old mount holes